

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.		C - Cont.	
CONNECTOR, Automatic Transmission Oil Cooler Tube	16.230	CONTROL, Radio Rear Speaker	15.320
CONNECTOR, Automatic Transmission Solenoid To Kickdown Switch	16.245	CONTROL, Rear Door Lock Remote	23.056
CONNECTOR, Back-Up Lamp Wire	3.318	CONTROL, Transmission Gear Selector	7.210
CONNECTOR, Carburetor To Fuel Pump Gasoline Tube	4.001	CONTROL, Windshield Wiper	22.038
CONNECTOR, Cylinder Head To Booster ..	1.059	CONVERTER, Automatic Transmission	16.030
CONNECTOR, Duct To Evaporator Housing..	13.510	COOLANT, All Season	15.040
CONNECTOR, Fuel Pump To Vacuum Line..	4.124	CORD, Folding Top Side Quarter Retainer..	28.072
CONNECTOR, Fuse Panel	3.218	CORE, Air Conditioning Condenser	13.450
CONNECTOR, Gasoline Tank Filler Neck To Tank	4.141	CORE, Air Conditioning Evaporator	13.475
CONNECTOR, Horn Wire	3.192	CORE, Heater	13.028
CONNECTOR, Hose To Hose	22.050	CORE, Overdrive Control	6.350
CONNECTOR, Instrument Cluster	3.635	CORE, Radiator	2.020
CONNECTOR, Instrument Cluster	3.520	CORE, Rear Air Suspension Rear Leveling Valve	11.365
CONNECTOR, License Plate Lamp Wire	3.341	CORE, Speedometer Cable	3.575
CONNECTOR, Light Switch	3.218	COUNTERSHAFT, Transmission	6.159
CONNECTOR, Oil Filter Inlet And Outlet Tube	1.204	COUPLING, Air Conditioning Hose Disconnect	13.440
CONNECTOR, Overdrive Kickdown Switch ..	6.367	COUPLING ASSEMBLY, Steering Gear Shaft To Stub Shaft	10.865
CONNECTOR, Printed Circuit	3.218	COUPLING ASSEMBLY, Steering Gear Shaft To Stub Shaft	10.865
CONNECTOR, Rear Air Suspension Air Reservoir To Rear Leveling Valve Tube..	11.360	COUPLING, Door Electric Operated Window Regulator Worm	23.308
CONNECTOR, Rear Air Suspension Compressor Oil Drain Tube	11.335	COUPLING, Propeller Shaft	9.101
CONNECTOR, Rear Air Suspension Rear Leveling Valve Cross To Air Spring Tube.	11.380	COUPLING, Rear Door Electric Operated Window Regulator Motor To Transmission.	23.307
CONNECTOR, Tube To Carburetor	22.050	COUPLING, Rear Quarter Electric Operated Window Regulator Worm	24.203
CONNECTOR, Tube To Head	22.050	COUPLING, Steering Gear Lower Shaft To Intermediate Shaft	10.708
CONNECTOR, Tube To Pump	22.050	COUPLING, Steering Gear Lower Shaft To Upper Shaft	10.708
CONNECTOR, Vacuum Harness At Manifold .	23.067	COUPLING, Steering Gear Upper Shaft	10.720
CONNECTOR, Windshild Washer Reservoir To Foot Pump Hose	15.440	COUPLING, Steering Gear Upper Shaft To Intermediate Shaft	10.708
CONNECTOR, Wire	3.163	COUPLING, Tailgate Electric Operated Window Regulator Worm	23.308
CONTACT ASSEMBLY, Horn	3.800	COURTESY LIGHT KIT	15.105
CONTACT, Distributor Cap	3.032	COVER, Air Conditioner Blower Motor Resistor	13.072
CONTACT, Horn Blowing Ring	3.406	COVER, Air Conditioning Evaporator Housing End	13.488
CONTACT, Horn Button	3.400	COVER, Air Conditioning Evaporator Housing Lower	13.488
CONTACT SET, Ignition	3.031	COVER, Air Conditioning Evaporator Housing Upper	13.488
CONTACT SET, Overdrive Solenoid	6.328	COVER ASSEMBLY, Air Intake Damper Access	13.160
CONTROL, Air Conditioning Recirculated Air	13.013	COVER ASSEMBLY, Clutch	5.001
CONTROL ASSEMBLY, Radio Rear Speaker .	15.320	COVER ASSEMBLY, Cylinder Head	1.068
CONTROL ASSEMBLY, Tow Start	5.350	COVER ASSEMBLY, Instrument Panel Air Conditioning Opening	22.100
CONTROL ASSEMBLY, Overdrive	6.350	COVER ASSEMBLY, Rear Axle Housing	9.007
CONTROL, Cowl Ventilator Cable	22.018	COVER ASSEMBLY, Timing Case	1.120
CONTROL, Distributor Vacuum	3.046	COVER, Automatic Transmission Converter Housing Front	16.040
CONTROL, Front Door Lock Remote	23.056	COVER, Automatic Transmission Pressure Regulator Valve	16.025
CONTROL, Heater Air Damper	13.017	COVER, Automatic Transmission Rear Bearing Retainer Inspection	16.175
CONTROL, Heater Air Damper And Water Valve	13.017		
CONTROL, Heater Air Outlet	13.017		
CONTROL, Heater Water Valve	13.017		
CONTROL, Heater Water Valve And Cowl Ventilator	13.017		
CONTROL, Outside Rear View Remote Control Mirror	15.270		

***** Refer separate Upholstery parts catalog