

KEY NO.	HOLLEY NO.	A.M. NO.	DESCRIPTION	PER CAR
8	5R-16	320 3102	φ⊞ Thermostat Housing Clamp Screw	3
9	5R-155	320 3103	φX Throttle Stop Screw	1
10	5R-294	320 3104	φ@ Air Vent Rod Clamp Screw and Lock Washer	1
11	5R-370	320 3105	φ@X Fuel Pump Cover Assy. Screw and Lock Washer	4
12	5R-552	320 3111	φ Fuel Bowl to Main Body Screw	4
13	5R-567	320 3112	φX Throttle Body Screw and Lock Washer	5
14	5R-569	320 3114	φ⊞ Choke Housing Screw and Lock Washer	3
15	5R-584	320 3116	φX Fast Idle Cam Lever Screw and Lock Washer	1
16	5R-595	320 3117	φX Pump Lever Adjusting Screw	1
17	5R-614	320 3118	φ Pump Discharge Nozzle Screw	1
18	5R-635	320 3119	φ*X Throttle Plate Screw	4
19	5R-682	320 3121	φ Pump Cam Lock Screw	1
20	5R-765	320 3123	φ@ Fuel Valve Seat Lock Screw	1
21	5R-807	320 3127	φ Fast Idle Cam Lever Screw	1
22	6R-2224A		Main Body and Plugs Assy.	1
23	7R-225	320 3128	φ@ Fuel Level Check Plug	1
24	8R-49		#+@ Fuel Level Check Plug Gasket	1
25	8R-482		#+@ Fuel Inlet Fitting Gasket	1
26	8R-657		#+ Fuel Bowl Screw Gasket	4
27	8R-659		#+⊞ Choke Housing Gasket	2
28	8R-669	320 2204	#+ Power Valve Body Gasket	1
29	8R-1051		#+X Throttle Body Gasket	1
30	8R-686		#+⊞ Choke Thermostat Housing Gasket	1
31	8R-926	315 8245	#+X Flange Gasket	2
32	8R-776		+@ Fuel Valve Seat Adjusting Nut Gasket	1
33	8R-777		+@ Fuel Valve Seat Lock Screw Gasket	1
34	8R-963		#+@ Fuel Bowl Gasket	1
35	8R-962		#+@ Metering Body Gasket	1
36	8R-844		#+ Pump Discharge Nozzle Gasket	2
37	9R-122		X Throttle Plate	2
38	10R-847A		X Throttle Lever and Shaft Assy.	1
39	12R-2578A		X Throttle Body and Shaft Assy.	1
40	15R-40	320 2206	* Idle Adjusting Needle	2
41	16R-260A-4	320 2209	@ Float and Hinge Assy. (Black)	1
42	18R-86A	320 2212	#+@ Fuel Inlet Valve and Seat Assembly	1
43	19R-189	320 3160	φX Pump Lever Adjusting Nut Fitting	1
44	19R-221	320 6338	@ Fuel Inlet Fitting	1
45	21R-572-21	320 3187	Pump Discharge Nozzle	1
46	22R-40-50	320 3164	Main Jet	2
47	23R-211	320 3169	φ@ Air Vent Valve	1
48	23R-258	320 6340	Pump Discharge Needle Valve	1
49	25R-237A-85	320 2215	#* Power Valve Assy.	1
50	27R-148		+@ Fuel Valve Seat "O" Ring Seal	1
51	27R-152		#+ Idle Needle Seal	2
52	27R-238	320 6341	∩ Choke Rod Seal	1
53	27R-223	320 6342	Choke Cold Air Tube Grommet	1
54	34R-1529A		⊞ Choke Housing and Plugs Assy.	1
55	34R-2183A		@X Fuel Pump Cover Assy.	1
56	34R-2818A		@ Fuel Bowl and Plugs Assy.	1
57	34R-3174A	320 3712	Main Metering Body and Plugs Assy.	1
58	35R-342A	320 2218	#*⊞ Diaphragm Assy.	1
59	36R-169	320 3189	φ*@ Float Retainer	1
60	36R-225	320 3190	φ*@ Air Vent Valve Retainer	1
61	38R-108	320 3191	φX Fast Idle Cam Lever Screw Spring	1
62	38R-110	320 3192	φX Throttle Stop Screw Spring	1
63	38R-569	320 3196	φ@X Diaphragm Return Spring	1
64	38R-583	320 3197	φX Fast Idle Cam Lever Spring	1
65	38R-587	320 3198	φX Pump Lever Adjusting Spring	1
66	38R-760	320 3202	φ@ Air Vent Rod Spring	1
67	38R-803	320 3203	φ@ Float Spring (Blue)	1
68	39R-5	320 6344	⊞ Choke Thermostat Shaft Hexagon Nut	1