

Note 8.400-2, Page No. Gr 8 - 42, Change Note 8.400-2 To Read:

NOTE 8.400-2: On 65 10 (V8-WPB) And 65 80 (WPB) used prior to Car Sequence No. W-010253.

Note 8.400-3, Page No. Gr 8 - 42, Change Note 8.400-3 To Read:

NOTE 8.400-3: On 65 10 (V8-WPB) And 65 80 (WPB) used beginning with Car Sequence No. W-010253.

Group No. 8.405, Page No. Gr 8 - 43, On Part Number 320 5011, Change Listing To Read:

63 10-80 (LHD-V8-Note 8.400-1 Type 2): 64 10 (LHD-V8): 65 10 (LHD-V8-Note 8.400-2): 64 80: 65 80 (Note 8.400-2) ..... 1 320 5011

Group No. 8.405, Page No. Gr 8 - 43, On Part Number 320 5956, Change Listing To Read:

65 10 (LHD-V8-LDB-Note 8.400-3): 65 80 (LDB-Note 8.400-3) ..... 1 320 5956

Group No. 8.480, Page No. Gr 8 - 46, On Part Number 320 5004, Change Listing To Read:

63 10-80 (LHD-V8-Note 8.400-1 Type 2): 64 10 (LHD-V8): 65 10 (LHD-V8-Note 8.400-2): 64 80: 65 80 (Note 8.400-2) ..... 1 320 5004

Group No. 8.480, Page No. Gr 8 - 46, On Part Number 320 5903, Change Listing To Read:

65 10 (LHD-V8-LDB-Note 8.400-3): 65 80 (LDB-Note 8.400-3) ..... 1 320 5903

Group No. 8.485, Page No. Gr 8 - 46, On Part Number 320 3362, Change Listing To Read:

62 Thru 65 01 (LHD): 62 10 (LHD): 63 Thru 65 10 (Six-LDB): 63-64 10 (LHD-V8): 62 Thru 65 80 ..... 1 320 3362

Group No. 10.280, Page No. Gr 10 - 31, Change Part Number 317 2090 Listing, To Read Part Number 320 5173.

(T-492)(LHD-770-LAW)(RHD-770-WAT)(LHD-990-LAW)...(Incl. Canceling Pin And Spoke Trim Plate) ..... 1 320 5173

Group No. 10.290, Page No. Gr 10 - 35, On Part Number 317 4443, Change Listing To Read:

64-65 01 (RHD-Note 10.290-1 Type 1).....(Replaces 317 0905) ..... 1 317 4443

Group No. 10.290, Page No. Gr 10 - 35, After Part Number 317 4443, Insert The Following Listing:

64-65 01 (RHD-Note 10.290-1 Type 2)..... 1 318 9130

Group No. 10.290, Page No. Gr 10 - 35, After Part Number 317 4619, Insert The Following Note:

NOTE 10.290-1: Two Types of Steering Gears were installed on 64-65 01 (RHD). They can be identified as follows:

- Type 1: The Cross Shaft Roller turns on Ball Bearings.
Type 2: The Cross Shaft Roller turns on Needle Bearings.

Group No. 10.306, Page No. Gr 10 - 38, On Part Number 320 4790, Change Listing To Read:

64-65 01 (RHD-Note 10.290-1 Type 1)..... 1 320 4790

Group No. 10.306, Page No. 10 - 38, After Part Number 320 4790, Insert The Following Listing:

64-65 01 (RHD-Note 10.290-1 Type 2) ..... 1 320 8460

Group No. 10.307, Page No. Gr 10 - 38, After Part Number 320 3064, Insert The Following Listing:

64-65 01 (RHD-Note 10.290-1 Type 1)..... 1 320 8457